



Connecting the BST-1 FU-Level controller to a Navpilot 700/711/720 series pilot

Setup:


You will need to enter the Installation Menu by pressing and holding the 'MENU' key and pressing the "ENTER" knob 3 times. This will display the menu below:

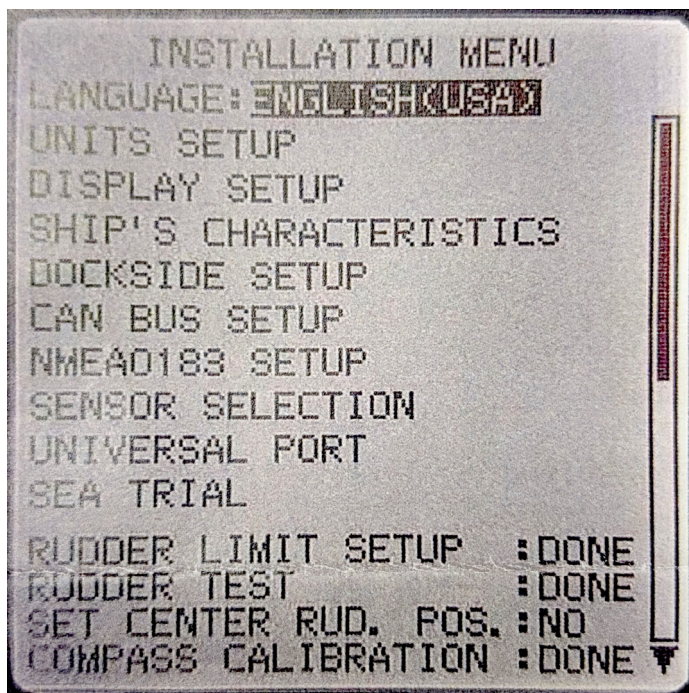


Scroll down past "SEA TRAIL" to Page 2:

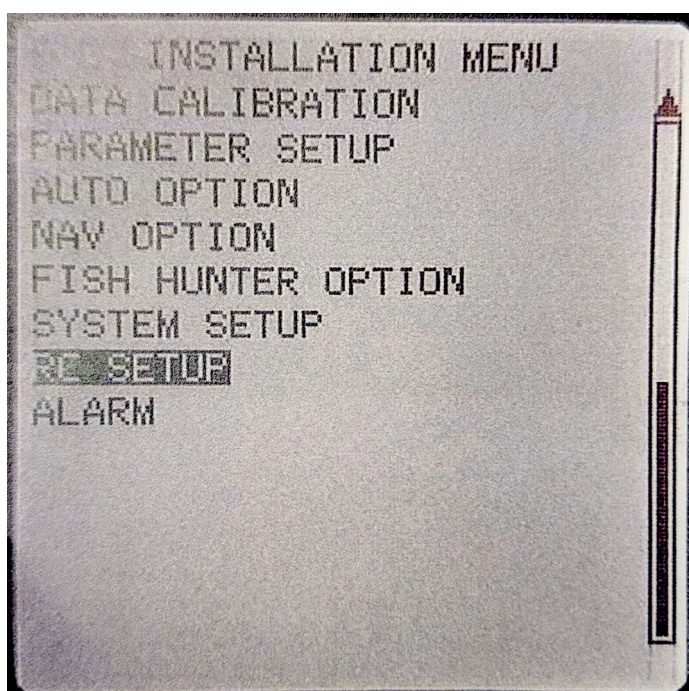


Select "RC SETUP" and press "ENTER". You will see the following menu screen:

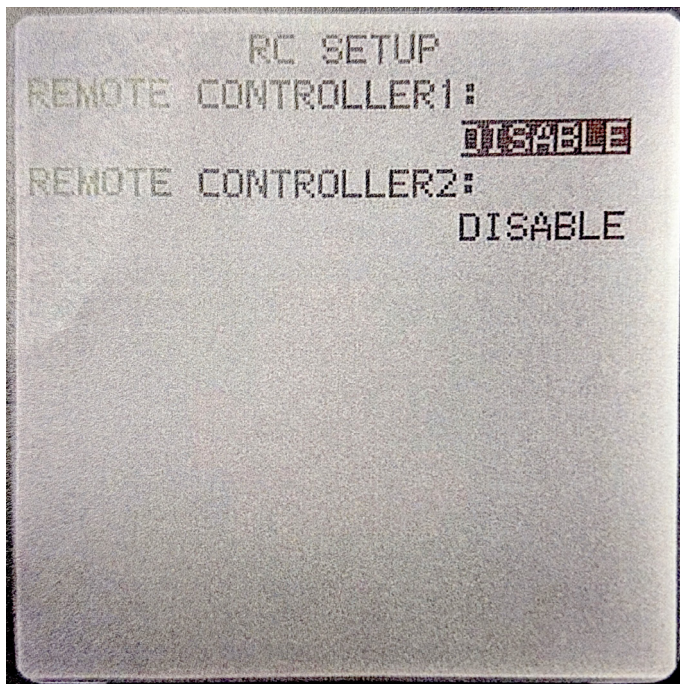


Highlight "DISABLE" under REMOTE CONTROLLER 1 and press ENTER:

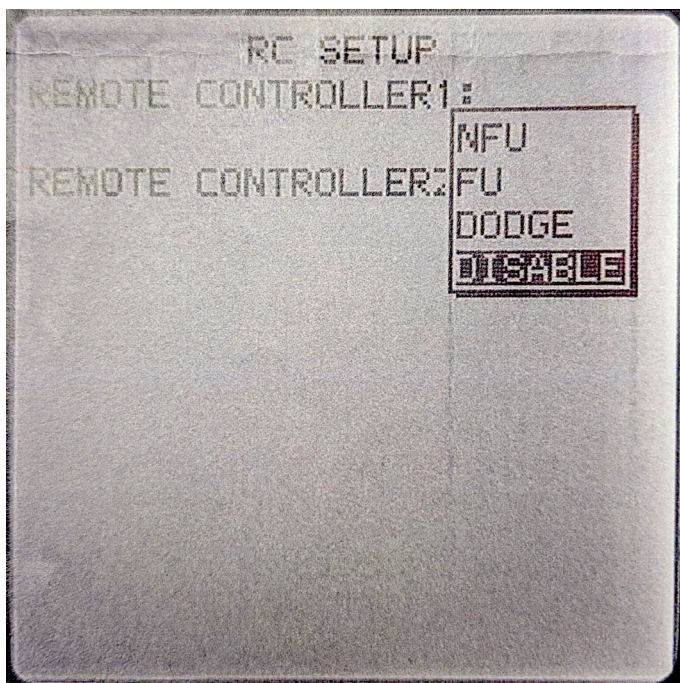

Scroll up and select "FU" from the list:

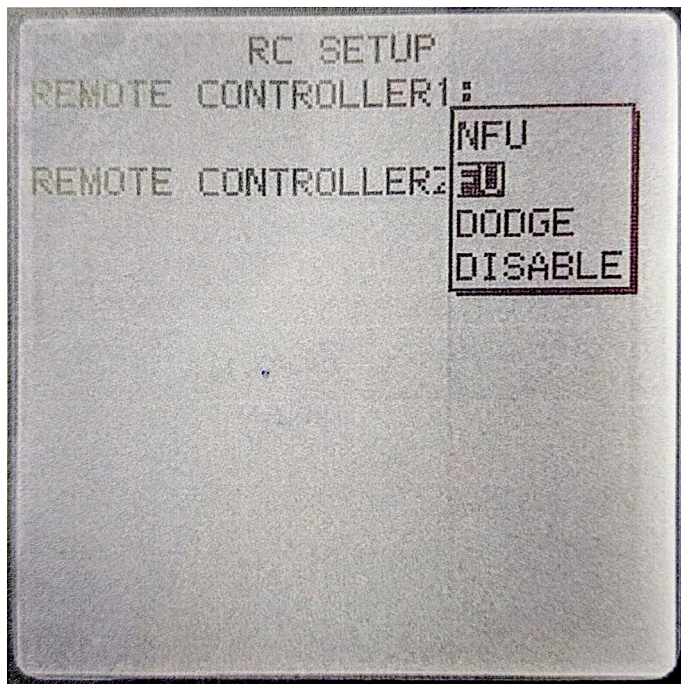


Press Enter to set the selection to "FU":

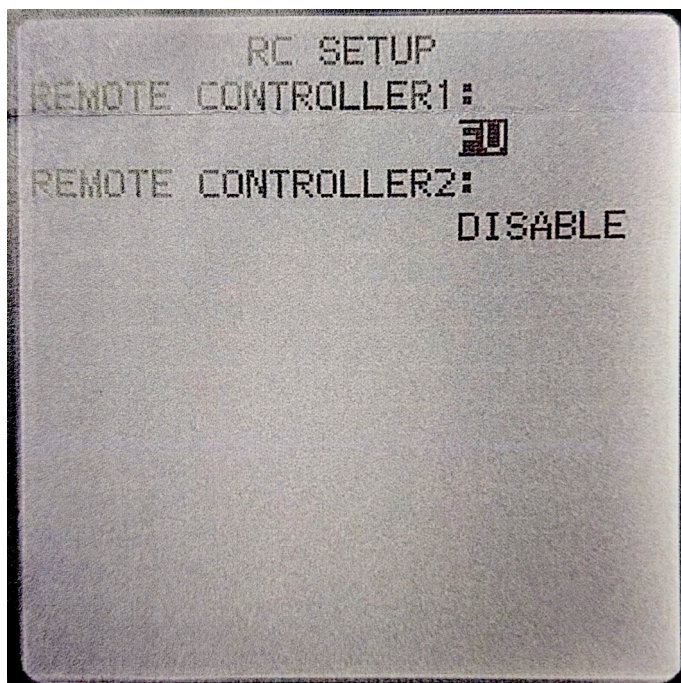


WIRING:

The wiring from the Remote port is very simple and similar to the Navport 500/511/520 series. The wiring is shown below:

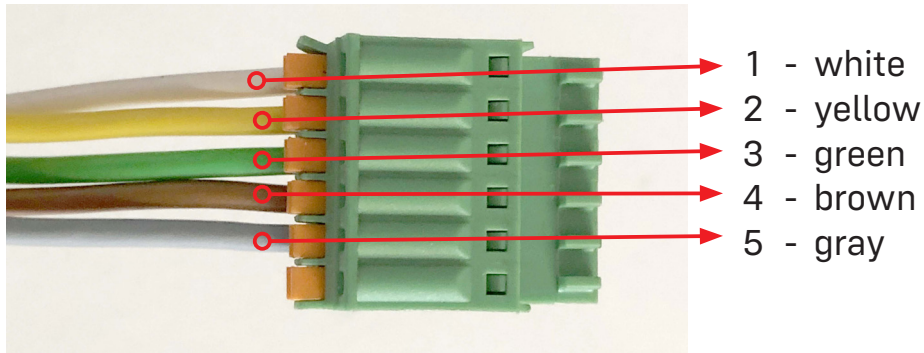

Port Connection (TB13):

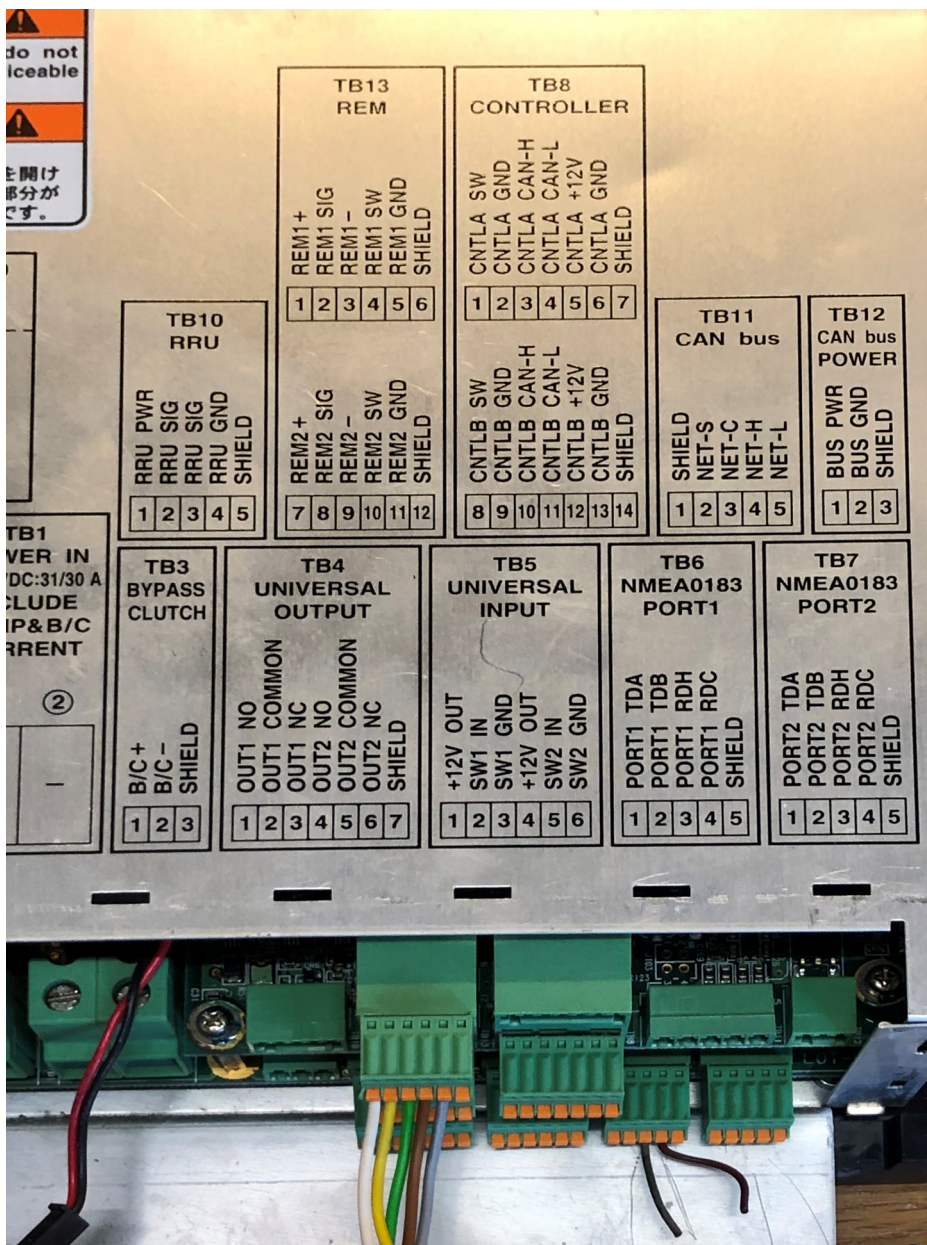

Connection Diagram: